



1 BOTTLE ASSEMBLY

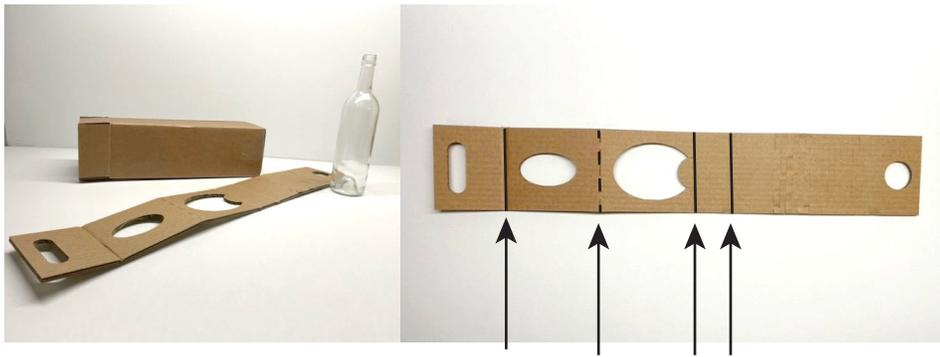


PRE-BREAK AT SCORES.

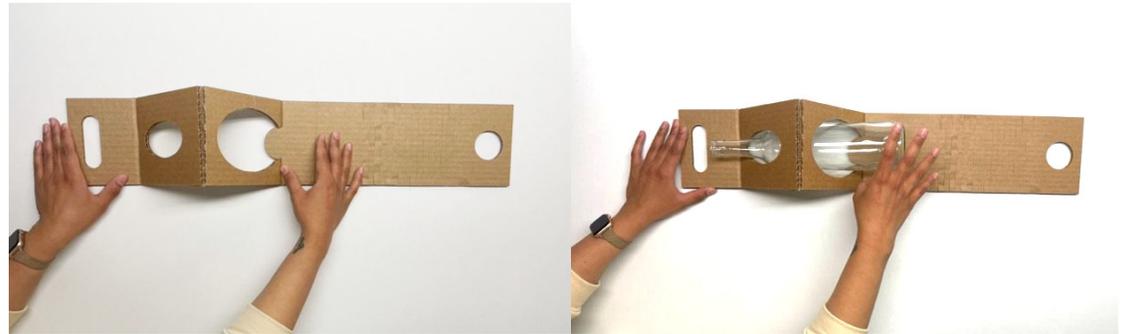

FOLD UP PERFORATED SCORES AS SHOWN.



STRETCH PANEL AS SHOWN.

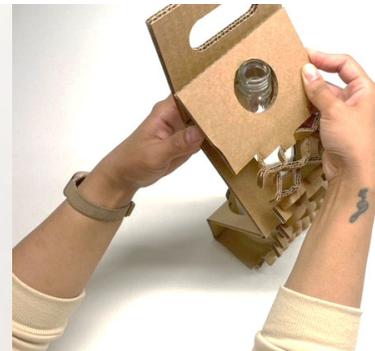

PULL STRETCHED PANEL TO TOP AND PLACE HOLE OVER BOTTLE NECK.



COMPLETED 1 BOTTLE ASSEMBLY.
INSERT IT INTO CARTON.